

# EVOLVEO

HD DVB-T2 H.265/HEVC recorder

---

## GAMMA T2




# INTRODUCTION


## Front panel



## Rear panel

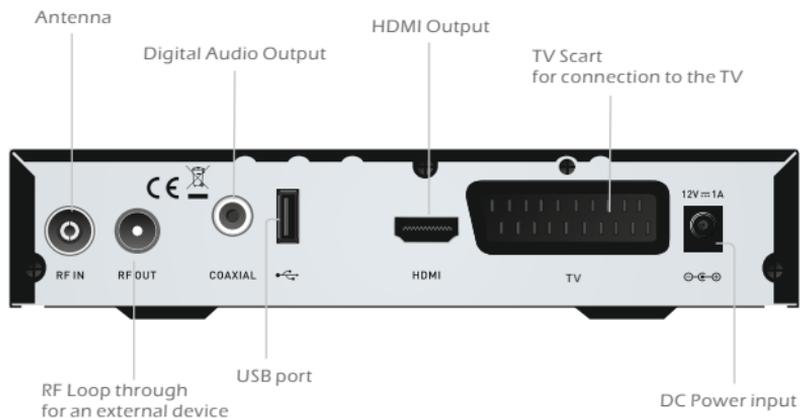

## Remote control

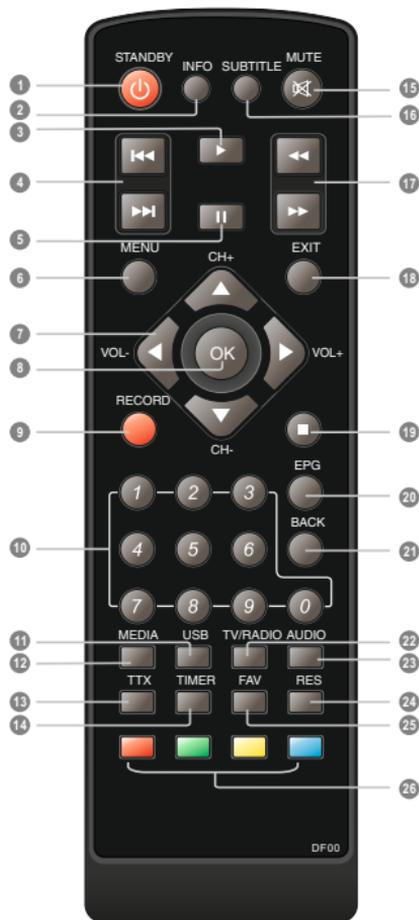


- 1 STANDBY  
(switch the STB on and standby)
- 2 INFO  
(Press for current channel information)
- 3 PLAY

- 4 Previous/Next
- 5 PAUSE (Pause/Active timeshift function)
- 6 Menu  
(Open and close the menu screen)
- 7 Cursor  
(used to navigate menu's items)
- 8 OK button  
(Confirm a selection within a menu)
- 9 RECORD  
(Record the TV program)
- 10 Numeric entry  
(Enter numeric values and select the channel directly by entering it's number)
- 11 USB  
(Enter the Video menu)
- 12 MEDIA  
(Enter Record menu)
- 13 TTX (On/Off teletext)
- 14 TIMER  
(Enter Timer Setting menu)
- 15 MUTE (Turn off/on the volume)
- 16 SUBTITLE (Set up the Subtitle)
- 17 Search backward/forward
- 18 EXIT (Exit from menu)
- 19 STOP  
(Stop program playback or recording)
- 20 EPG  
(Open up Electronic Program Guide Menu)
- 21 BACK  
(Switch to previous channel)
- 22 TV/RADIO  
(Switch between TV and Radio)
- 23 AUDIO  
(Select audio mode and audio track)
- 24 RES (Switch HDMI resolution)
- 25 FAV  
(Open the Favorite list)
- 26 RED/GREEN/YELLOW/BLUE Buttons  
(For interactive function/Submenu function buttons)

## SYSTEM CONNECTION

There are many different types of TV and other equipment that you can connect to the BOX. In this manual you will see some of the most common ways to connect your equipment.

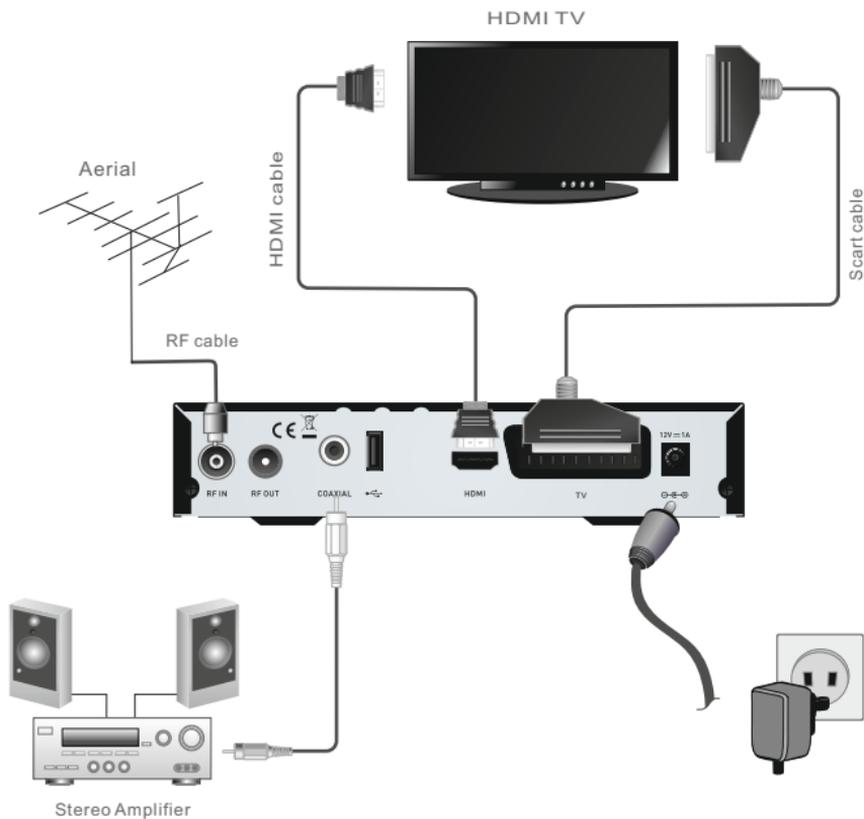


**NOTE:**

1. Do not plug/unplug HDMI connector while the BOX power is on.
2. Power indicator will turn green when the BOX power on, and turn red when the BOX goes standby.

# GETTING STARTED

## Welcome

If you use the STB for the first time, the "Welcome" menu appears. Press cursor button to setup the "Region", "Language", "Display Mode", "Aspect Mode". Highlight "OK" and press the "OK" button to start channel search.

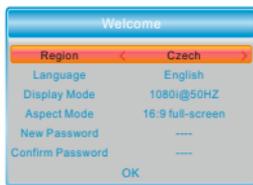

## Installation


"Installation" menu allows you to set up channel search and LCN option.

- 1 Press the "MENU" button to enter main menu.
- 2 Press "UP" or "DOWN" button to highlight "Installation", press "RIGHT" button to enter the "Installation" menu.
- 3 Press "UP" or "DOWN" button to highlight the desired item and press "OK" button to enter the sub-menu.
- 4 Press "EXIT" button to exit.

### Auto Scan

"Auto Scan" menu allows you to set up automatic channel search.

- 1 Highlight the "Auto Scan", press "OK" button to enter the Auto Scan menu.
- 2 Press the cursor button to set "FTA Only" / "T2 Signal Only".
- 3 Highlight "Search", press the "OK" button to start channel scan automatically.

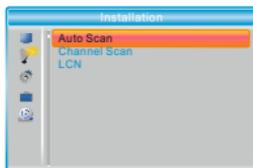

### Channel Scan

"Channel Scan" menu allows you to set up manual channel search.

- 1 Highlight "Channel Scan", press the "OK" button to enter the Channel Scan menu.
- 2 Press the cursor button to set Scan mode, Scan Band, Channel No., Frequency, Bandwidth and Network Search.
- 3 Highlight "Search", press "OK" button to start channel scan manually.



### LCN

This menu allows you to activate/disactivate the LCN function. If LCN (Logical Channel Number) Select function is activated, You can't change the original number of TV channels by scanning.

# OPERATION

## Channel List

You can access the Channel list by pressing "OK" button.  
Press the cursor buttons to select the channel you want to view.

## Accessing the Electronic Program Guide (EPG)

### Accessing the EPG of all channels:

- 1 Press the "EPG" button to enter the EPG menu, and a preview of your current channel will be displayed in the top right corner of the screen.
- 2 Press "UP" or "DOWN" button to select the desired channel. Press "LEFT" or "RIGHT" button to select the desired event.
- 3 Press "GREEN" button to timer the event. Press "RED" button to show the "Time bar" menu, you can select the way showing time and move time by pressing "OK" button.
- 4 Press the "OK" button to display the information about the selected event.
- 5 Press "EXIT" button to back to the previous menu.

In "Time bar" menu:

- Exit time bar.
- ^ Back to the current time.
- ▶ Jumps time forward or backward every half an hour.
- Jumps time forward or backward every 2 hours.
- Jumps time forward or backward every 24 hours.



# EDIT CHANNEL

## Edit Channel menu

- 1 Press the "MENU" button to enter main menu.
- 2 Press "UP" or "DOWN" button to highlight "Edit Channel", press "RIGHT" button to enter the Edit Channel menu.
- 3 Press "UP" or "DOWN" button to highlight the desired item and press "OK" button to enter the sub-menu.
- 4 Press "EXIT" button to exit.



## TV / Radio Channel list

Use this menu to set up Favourite, lock, skip, move, sort, delete and rename for the selected TV/Radio channels.

- 1 In the Edit Channel menu, highlight "TV Channel List" or "Radio channel List", press "OK" button to enter TV channel list/Radio Channel list menu.
- 2 Press "UP" or "DOWN" button to highlight the desired channel, a preview of the channel will be displayed in the top right corner of the screen.
  - Press "FAV" button, then press "OK" button to set the FAV channels.
  - Press "Red" button to activate "Lock" function, then press "OK" button, you will be asked to input the password then the selected Channel will be locked.
  - Press "Green" button to activate "Skip" function, press "OK" button to skip the desired channel.
  - Press "Yellow" button to activate "Move" function, highlight the desired channel and press "OK" button to confirm. Press "UP" or "DOWN" button to select the new position and press "OK" button, the channel will be moved to the new position.
  - Press "Blue" button to enter Edit channel sub menu.
  - Press "OK" button again to cancel the corresponding function.
  - Press "colour" buttons again to exit the corresponding function.
- 3 Press "Exit" button to save and back to "Edit Channel" menu



### NOTE:

Basically, the operation of "Radio Channel List" is the same as "TV Channel List", but there is one point different: In "Radio Channel List" mode, there is no video information, so it will always display Radio's logo in the right side preview window.

## Delete All

- 1 In the Edit Channel menu, highlight "Delete All", press "OK" button. You are asked to input a password.
- 2 A warning window appears.  
Select "Yes", press "OK" button to delete all channels.  
Select "No", Press "OK" button to cancel deleting.

**Warning! Do you really want to delete all channels?**

Yes

No

# SYSTEM SETUP

## System setup menu

Many aspects of your STB can be set to reflect your circumstances and preference.

- ① Press the "MENU" button to enter the main menu.
- ② Press "UP" or "DOWN" button to highlight "System Setup", press "RIGHT" button to enter the System Setup menu.
- ③ Press "UP" or "DOWN" button to highlight the desired item and press "OK" button to enter the sub-menu.
- ④ Press "EXIT" button to exit.



## Language

This menu allows you to set Language of system, Audio, Subtitle and Teletext and to set subtitle function.

Subtitle: Off/Normal/Hard of Hearing

Mp4 Subtitle CodePage: Windows-1250/ISO8859



## TV System


This menu allows you to set Video Resolution, Aspect Mode, Video Out and Digital Audio Out.

Video Resolution: Set up Various video resolutions.

Aspect Mode: 4:3PS/4:3LB/16:9PB/16:9PS/4:3 full-screen/  
16:9 full-screen

Video Out: CVBS/RGB

Digital Audio Out: BS Out/LPCM Out

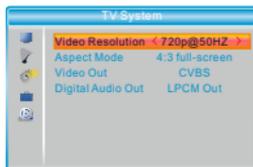

## Local Time Setting

This menu allows you to set the region and the local time.

Region: Use this menu to change the region.

GMT Usage: Use this menu to open the usage of GMT by Region/User Define.

GMT offset: Also to close the usage of GMT.  
The GMT offset range is "-11:30 ~ +12:00", increasing every half hour progressively.  
(Only valid in "User Define" mode for GMT Usage.)

Summer Time: On/Off


Date/Time: Press numeric button to set the date/time.  
(Only valid in "Off" mode for GMT Usage.)



## Timer Setting

This menu allows you to set the program timer. You can set 8 timers.

<b>Timer Mode:</b>	Off/Once/Daily/Weekly/Monthly
<b>Timer Service:</b>	Channel/Record
<b>Wakeup Channel:</b>	Set a desired channel as the wakeup channel.
<b>Wakeup Date:</b>	Set Wakeup Date by pressing numeric button.
<b>On Time:</b>	Set On Time by pressing numeric button.
<b>Duration:</b>	Set Duration by pressing numeric button.

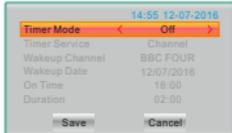

## Parental Lock

This menu allows you to lock the menu and the channels, set Rating Lock and change the Password.

- In "System Setup" menu, highlight "parental Lock" and press "OK" button, you are asked to input a password.
- After inputting the correct password by pressing numeric buttons, the parental lock menu appears.


<b>Menu Lock:</b>	To lock the Edit channel/ Installation menu. You can set menu lock to on/off.
<b>Rating Lock:</b>	Off/AGE 4~AGE 18.
<b>New Password:</b>	To change the password.
<b>Confirm Password:</b>	To confirm the new password.



## OSD Setting

This menu allows you to set the time of OSD Timeout and OSD Transparency.

<b>OSD Timeout:</b>	1-10
<b>OSD Transparency:</b>	Off/10%/20%/30%/40%.

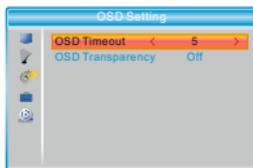

## Favorite

This menu allows you to rename the favorite group.

- In "System Setup" menu, highlight "Favorite", press "OK" button to enter Favorite menu.
- Select the favourite group you want to change, press "OK" button to open the mock keypad. Input letter and numeric one by one by pressing the cursor buttons and press "OK" button to select, after finished input, press "Blue" button, you changed Favorite group name successfully.
- Press "EXIT" button to quit the group rename menu.




## Audio Description Setting

This menu allows you to set up Audio Description Setting.

AD Service: On/Off

Use AD as default: On/Off

AD Volume Offset: -3 ~ 3

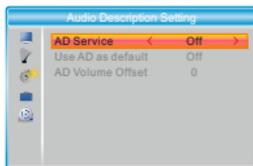

## Other

This menu allows you to set Antenna Power, Channel Play Type, Auto Standby and Loophrough In Standby.

Antenna Power: On [STB will provide 5V power to antenna]  
Off [STB will not provide 5V power to antenna]

Channel Play Type: All/Free/Scrambled

Auto Standby: 30 Min/ 1 Hour/2 Hours/3 Hours/Off

Loophrough In Standby: On/Off



# TOOLS

## Tools main menu

- 1 Press the "MENU" button to enter main menu.
- 2 Press "UP" or "DOWN" button to highlight "Tools", press "RIGHT" button to enter the Tools menu.
- 3 Press "UP" or "DOWN" button to highlight the desired item and press "OK" button to enter the sub-menu.
- 4 Press "EXIT" button to exit.



## Information

You will find here important information about the hardware and embedded software.

- 1 In "Tools" menu, highlight "Information", press "OK" button to open information window.
- 2 Press "EXIT" button to exit "Information" menu.



## Factory Setting

This menu allows you to re-set the STB back to the factory settings, clear all existed channels.

- ① In the "Tools" menu, highlight "Factory Setting", press "OK" button.
- ② A confirmation window is displayed.  
Select "Yes" to return back to factory settings and clear all channels.  
Select "No" to cancel back to factory settings.
- ③ Press "EXIT" button to exit "Factory Setting" menu.



## Software Upgrade

This menu allows you to upgrade software version by USB.

- ① In the "Tools" menu, highlight "Upgrade by USB", press "OK" button, Software Upgrade menu is shown.
- ② Press cursor button to select the desired item, then highlight "Start" and press "OK" button to start upgrade.
- ③ Press "EXIT" button to exit "Upgrade by USB" menu.




## Tools

## Remove USB device safely

This menu allows you to remove the external USB device safely.

- ① In "Tools" menu, highlight "Remove USB device safely".
- ② Press "OK" button to confirm. Then a window is displayed.  
Select "OK" button to remove the USB device.  
Select "Cancel" button to cancel the operation.

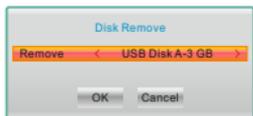

# Media Player

## Media Player main menu

Ensure to insert an external Mass Storage Device on the USB port.

- ① Press the "MENU" button to enter main menu.
- ② Press "UP" or "DOWN" button to highlight "Media Player", press "RIGHT" button to enter the Media Player menu.
- ③ Press "UP" or "DOWN" button to highlight the desired item and press "OK" button to enter the sub-menu.
- ④ Press "EXIT" button to exit.



## Media Playback

This function allows you to play the media files from the USB HDD.

- ① In "Media player" menu, highlight "Record", "Video", "Music" or "Image".
- ② Press "OK" button to enter Media Playback menu.
- ③ Press "UP" or "DOWN" button to select a desired media file, and press "OK" button to play the files.
- ④ Press "EXIT" button to exit.



### Music:

- "RED" button: Press "RED" button to show Play List.
- "GREEN" button: Move the highlight to the file which you want to add to play list, then press "Green" button to add. It will mark a favorite icon on the file.
- "YELLOW" button: Press "Yellow" button to add all file of current directory to play list. Press again to delete all file of current directory from the play list.
- "BLUE" button: Press "Blue" button to enter to edit sub-menu.
- "1" button: Press to switch TAB between Music/Image/Video/Record.
- "2" button: Press "2" button to open the sort window. You can sort by Name/Time/Size/Favorite.
- "INFO" button: Press "INFO" button to set repeat mode. The option is Repeat Folder/Random Folder/Repeat One.
- "EXIT" button: Return to the upper directory.

### Image:

- "RED" button: Press "Red" button to show play list.
- "GREEN" button: Move the highlight to the file which you want to add to play list, then press "Green" button to add. It will mark a favorite icon on the file.
- "YELLOW" button: Press "Yellow" button to add all file of current directory to play list. Press again to delete all file of current directory from the play list.
- "BLUE" button: Press "Blue" button to enter to edit sub-menu.
- "1" button: Press to switch TAB between Music/Image/Video/Record.
- "2" button: Press "2" button to open the sort window. You can sort by Name/Time/Size/Favorite.
- "INFO" button: Press "INFO" button to open image setup
- "3" button: Press "3" button to view image in multi view mode
- "EXIT" button: Return to the upper directory.

Video:

- 'BLUE' button: Press to enter to edit sub-menu for the selected file.
- '1' button: Press to switch TAB between Music/Image/Video/Record.
- '2' button: Press to sort the files of the current directory by Name/Time/Size.
- 'INFO' button: Press to set repeat mode (Repeat Folder/Repeat One).
- 'EXIT' button: Return to the upper directory.

Record

- 'RED' button: Press to Rename the selected recording file.
- 'GREEN' button: Press to Lock the selected recording file. (The password is necessary for the operation),  
Press again to unlock the recording file.
- 'YELLOW' button: Press to delete the selected recording file.
- '1' button: Press to switch TAB between Music/Image/Video/Record.
- 'EXIT' button: Return to the upper directory.

## HDD Information

This menu can display some parameters of Removable HDD.


- ① In "Media Player" menu, highlight "HDD Information", press "OK" button to open HDD information window.
- ② Press "EXIT" button to exit.

- Format FAT/NTFS

Press YELLOW button to open Format menu.  
Press "LEFT" or "RIGHT" button to change Disk Mode.  
Press "OK" button to format. Press "Cancel" button to cancel.

- DVR Set REC&TMS/Record/Timeshift

Press BLUE button to open DVR Set menu.  
Press "LEFT" or "RIGHT" button to change DVR Type.  
Press "OK" button to format. Press "Cancel" button to cancel.

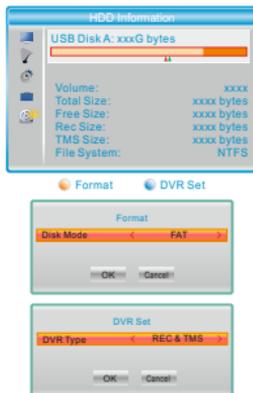

## DVR Setting

This menu allows you to set the DVR Settings.

- ① In "Media Player" menu, highlight "DVR Setting", press "OK" button to enter "DVR Setting" menu.
- ② Press "UP" or "DOWN" button to highlight the desired item and press "LEFT" or "RIGHT" button to change the setting.
- ③ Press "EXIT" button to exit.

- Timeshift: Pause/Off/Auto
- Jump: 30 sec/ 1 min/5 min/10 min/15 min/20 min/30 min
- After Recording: Watch TV/Go to Standby-mode



# TIMESHIFT/RECORD

Plugging an external Mass Storage Device on the USB port gives you access to Time Shift/Record a broadcast programme.

- Pause a broadcast programme and continue watching it later (Time Shift )
- Record a broadcast programme.
- When the space available on the Mass Storage Device runs out, recording operation of broadcast will stop.


**NOTE:** Please use USB 2.0 disk when recording or timeshift.  
For timeshift and recording feature, you need take bigger size USB driver or HDD (>2GB).

## Timeshift

### Initiate:

Time Shift can be done in full screen mode by pressing the "PAUSE" button.

- Press "RIGHT" or "LEFT" button to select the time you want to start.
- Press "OK" button to start timeshift playback.

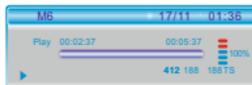

### Playback

During the playback, it is possible to perform the following actions :

- Press "PAUSE" button to pause the playback.
- Press "FORWARD" button to fast forward the playback.
- Press "BACKWARD" button to rewind the playback.
- Press "STOP" button to stop TimeShift playback and return to Live programme.

## Record

### Instant record:

In full screen mode, press "RECORD" button to record the current programme instantaneously.

- Press "RECORD" button again can input duration.
- Press "STOP" button to stop recording, then a confirmation window appears.
- Select "Yes" to stop recording. Select "No" to continue recording.

### Timer record

You can enter timer setting menu to set a timer record by EPG or System set up option.

**NOTE:** This product allows you to record two channels from different frequency at the same time.

## TROUBLESHOOTING

In some region, the digital terrestrial signal may be weak. So you'd better use the antenna in which the booster was built, for watching the weak signal channels.

Problem	Possible cause	What to do
Standby light not lit	Mains lead unplugged	Connect the main power cable.
No signal found	1. The antenna is not properly aligned. 2. The signal is too weak.	1. Adjust the direction of the antenna. 2. Get a stronger antenna or antenna amplifier.
Channel search is not working.		Be sure to set the antenna in the player's main menu is correct.
Coded channel alert.	The channel is encoded.	Select alternative channel
No response to remote control	The receiver has no power cord in the socket. The driver is not properly pointing. The front of the player is shaded. The batteries are exhausted.	Plug the main power cord into the socket. Point the driver to the front of the player. Loosen the space in front of the front of the player. Replace the batteries.
No password is listed anywhere.		The default password is always 0000.
There is no sound.	The selected channel has a signal but no sound.	Press the Audio button to make sure the selected channel has sound.
After moving your player to another room, you've found that you no longer receive a digital signal.	By moving, the signal strength received by the player may be reduced.	The antenna cable must ideally have the same length as the previous room, or use an amplifier signal or use a signal amplifier

# SPECIFICATIONS

<p><u>TUNER &amp; CHANNEL</u></p>	<ul style="list-style-type: none"> <li>• RF INPUT CONNECTOR x1 (IEC-TYPE, IEC 169-2, FEMALE)</li> <li>• RF OUTPUT CONNECTOR x1 (IEC-TYPE, IEC 169-2, MALE (LOOPTHROUGH))</li> <li>• FREQUENCY RANGE: 174MHz~230MHz(VHF) 470MHz~862MHz (UHF)</li> <li>• SIGNAL LEVEL: -15 ~ -80 dbm</li> </ul>
<p><u>DECODER</u></p> <ul style="list-style-type: none"> <li>• Video decoder</li> <li>• Audio decoder</li> <li>• INPUT RATE</li> <li>• VIDEO FORMATS</li> <li>• VIDEO OUTPUT</li> <li>• MODULATION</li> </ul>	<p>MPEG-2 MP@HL, AVC/H.264 HP@L4.1 MPEG-4 ASP SUPPORTED, HEVC/H.265 MP@L4.1 MPEG-1 Layer 1,2/PCM/HE-AAC V1.0 ICE958 SPDIF/Dolby D+ and Dolby D MAX. 48Mbit/s 4:3/, 16:9 SWITCHABLE HDMI, CVBS, RGB QPSK, 16QAM, 64QAM, 256QAM</p>
<p><u>CONNECTION</u></p> <ul style="list-style-type: none"> <li>• TUNER</li> <li>• DATA PORT</li> <li>• HDMI</li> <li>• SCART</li> <li>• SPDIF</li> </ul>	<p>ANTENNA INPUT x1, RF OUTPUT x1 USB slot x2 HDMI OUTPUT x1 TV OUTPUT x1 COAXIAL OUTPUT x1</p>
<p><u>POWER SUPPLY</u></p> <ul style="list-style-type: none"> <li>• INPUT VOLTAGE</li> </ul>	<p>12V <math>\equiv</math> 1A</p>

## DECLARATION OF CONFORMITY

Hereby, the company Abacus Electric, s.r.o. declares that the EVOLVEO Gamma T2 is in compliance with the requirements of the standards and regulations, relevant for the given type of device.

Find the complete text of Declaration of Conformity at <ftp://ftp.evolveo.com/ce>

Dovozce / Dovyozca / Importer / Importör  
Abacus Electric, s.r.o.  
Planá 2, 370 01, Czech Republic

Výrobce / Vgyobca / Manufacturer / Gyártó  
Naxya Limited  
No.5, 17/F, Strand 50, 50 Bonham Strand,  
Sheung Wan, Hong Kong

Copyright © Abacus Electric, s.r.o.  
[www.evolveo.com](http://www.evolveo.com)  
[www.facebook.com/EvolveoEU](http://www.facebook.com/EvolveoEU)

All rights reserved.  
Design and specification may be changed without prior notice.